




PORTAHERRAMIENTAS REGULABLES PARA LAMAS DE TRONZAR - MANO DERECHA


AR

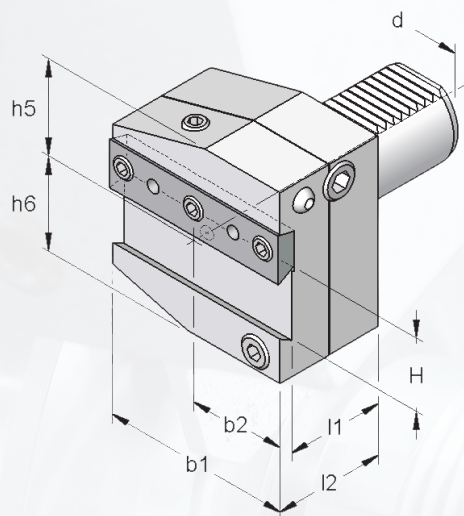

Nº Art.	TIPO	d	b1	b2	H	h5	h6	L1	L2
7918	AR - 30 x 26	30	70	35	26	32	39	44	50
7919	AR - 40 x 26	40	85	42,5	26	43	41,5	44	50
7920	AR - 40 x 32	40	85	42,5	32	43	41,5	44	50
7921	AR - 50 x 26	50	100	50	26	43	45	44	50
7922	AR - 50 x 32	50	100	50	32	43	45	44	50

PORTAHERRAMIENTAS REGULABLES PARA LAMAS DE TRONZAR - MANO IZQUIERDA

AL

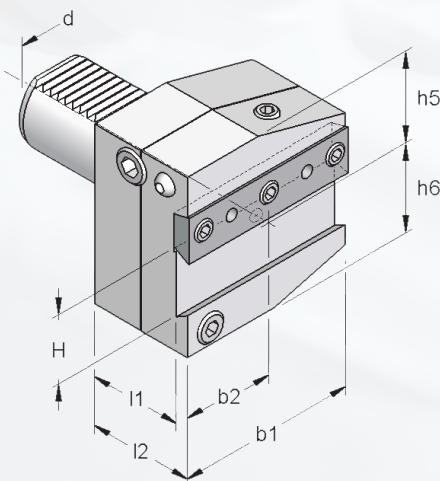

Nº Art.	TIPO	d	b1	b2	H	h5	h6	L1	L2
7925	AL - 30 x 26	30	70	35	26	32	39	44	50
7926	AL - 40 x 26	40	85	42,5	26	43	41,5	44	50
7927	AL - 40 x 32	40	85	42,5	32	43	41,5	44	50
7928	AL - 50 x 26	50	100	50	26	43	45	44	50
7929	AL - 50 x 32	50	100	50	32	43	45	44	50